
n-PROPYL MERCAPTAN

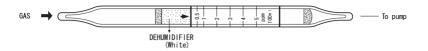

PERFORMANCE

1) Measuring range : 1-10 ppm 0.5-5 ppm Number of pump strokes 1/2(50mL) 1(100mL) 2) Sampling time : 1 minute/1 pump stroke

3) Detectable limit : 0.2 ppm(100mL)
4) Shelf life : 2 years
5) Operating temperature : 0~40°C

6) Reading : Direct reading from the scale calibrated by Methyl mercaptan at 1 pump stroke

7) Colour change : Pale yellow \rightarrow Pink

2. RELATIVE STANDARD DEVIATION

RSD-low : 10 % RSD-mid. : 5% RSD-high : 5%

3 CHEMICAL REACTION

By reacting with Mercuric chloride, Hydrogen chloride is produced and PH indicator is discoloured. RSH + HgCl₂ \rightarrow RS (HgCl) + HCl

4. CALIBRATION OF THE TUBE

PERMEATION TUBE METHOD

5. INTERFERENCE AND CROSS SENSITIVITY

| Substance | Interference | Coexistence |
|-------------------|----------------------------------|--|
| Arsine | Similar stain is produced. | Higher readings are given. |
| Hydrogen selenide | " | " |
| Phosphine | " | " |
| Hydrogen sulphide | " | " |
| Hydrogen cyanide | Whole reagent is changed to Red. | 11 |
| Sulphur dioxide | | Whole reagent is changed to Pale red, but Pink stain indicates Mercaptans conc. |

(NOTE)

In case of 1/2 pump strokes, following formula is available for the actual concentration. Actual concentration $= 2 \times \text{Reading value}$

This tube scale is calibrated based on Methyl mercaptan and the same scale is available for n-Propyl mercaptan.