
FORMALDEHYDE

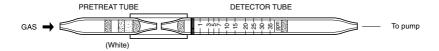

1. PERFORMANCE

1) Measuring range ∴ 1-35 ppm Number of pump strokes ∴ 3(300mℓ)

2) Sampling time : 3 minutes/3 pump strokes

3) Detectable limit ∴ 0.5 ppm 4) Shelf life ∴ 3 years 5) Operating temperature ∴ 0 ~ 40 °C

6) Reading : Direct reading from the scale calibrated by 3 pump strokes

7) Colour change : White→Brownish orange

2. RELATIVE STANDARD DEVIATION

RSD-low: 15% RSD-mid.: 15% RSD-high: 15%

3. CHEMICAL REACTION

By reacting with Aromatic compounds, a polymer is produced.

$$HCHO + \bigcirc + H_2SO_4 \longrightarrow \left[\bigcirc \bigcap_{H}^{H} \bigcap_{n} + H_2C_1 \right]$$

4. CALIBRATION OF THE TUBE

COLOURIMETRY METHOD

5. INTERFERENCE AND CROSS SENSITIVITY

Substance	Interference	ppm	Coexistence
Styrene	Similar stain is produced.		Higher readings are given.
Trichloroethylene		500	"
Ethyl acetate		1,000	"
Ether		1,000	"
Acetaldehyde	Similar stain is produced.	1	"