

1. PERFORMANCE

- | | | |
|--------------------------|--|------------|
| 1) Measuring range | : 2-100 ppm | 0.2-25 ppm |
| Number of pump strokes | 1 (100mℓ) | 4 (400mℓ) |
| 2) Sampling time | : 1 minute/1 pump stroke | |
| 3) Detectable limit | : 0.2 ppm (400mℓ) | |
| 4) Shelf life | : 2 years (Necessary to store in a refrigerated place ; 0 ~ 10 °C) | |
| 5) Operating temperature | : 0 ~ 40 °C | |
| 6) Reading | : Direct reading from the scale calibrated by 1 pump stroke | |
| 7) Colour change | : Yellow → Red | |

2. RELATIVE STANDARD DEVIATION

RSD-low : 10% RSD-mid. : 5% RSD-high : 5%

3. CHEMICAL REACTION

By reacting with Mercury chloride, Hydrogen sulphide is liberated and PH indicator is discoloured.



4. CALIBRATION OF THE TUBE

COLOURIMETRY METHOD

5. INTERFERENCE AND CROSS SENSITIVITY

Substance	Interference	ppm	Coexistence
Sulphur dioxide	Similar stain is produced.	1	Higher readings are given.
Hydrogen sulphide	FIG.1 /	3	/
Ammonia	The accuracy of readings is not affected.	5	Lower readings are given.

(NOTE)

In case of 4 pump strokes, following formula is available for the actual concentration.

$$\text{Actual concentration} = \text{Reading value} \times \frac{1}{4}$$

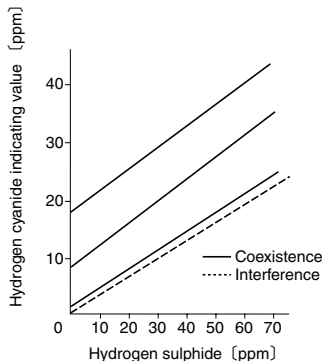


FIG.1 Influence of Hydrogen sulphide