

# Kitagawa SILANE DETECTOR TUBES

- ★ READ CAREFULLY THIS INSTRUCTION MANUAL AND THE INSTRUCTIONS OF THE ASPIRATING PUMP PRIOR TO USING THIS PRODUCT.
- ★ DON'T DISCARD THIS INSTRUCTION MANUAL UNTIL ALL THE TUBES IN THIS BOX ARE USED UP.

## 1. PERFORMANCE:

Measuring Range      1 - 50 ppm      0.5 - 25 ppm  
 and Sampling Time:    (1 pump stroke)    (2 pump strokes)  
                                   (5 minutes)        (10 minutes)

Graduations on the detector tube are based on 1 pump stroke.

Colour Change:	Yellow → Red	
Detectable Limit:	0.3 ppm (2 pump strokes)	
Operating temperature:	0-40 °C (32-104°F) (Temperature correction is necessary.)	
Aspirating Pump:	Model AP-1, AP-1S, 400A or AP-400	

### -CAUTION

1. DETECTOR TUBE CONTAINS REAGENTS.
2. DON'T TOUCH THESE REAGENTS DIRECTLY ONCE TUBES ARE BROKEN.
3. KEEP THE TUBES OUT OF THE REACH OF CHILDREN.

#### NOTICE

1. USE ONLY WITH PUMP MODELS AP-1, AP-1S, 400A OR AP-400. OTHERWISE, CONSIDERABLE ERROR IN INDICATION MAY OCCUR.
2. DON'T USE FLOW CONTROL ORIFICE WITH THIS TUBE. (FOR MORE DETAIL, REFER TO THE INSTRUCTIONS OF THE ASPIRATING PUMP.)
3. BEFORE TESTING, CHECK THE ASPIRATING PUMP FOR LEAKS (REF. ITEM 8). ANY PUMPS SHOWING SIGNS OF LEAKAGE SHOULD BE CORRECTED BEFORE USE.
4. DON'T USE THIS TUBE OUTSIDE THE STATED OPERATING TEMPERATURE RANGE.
5. STORE TUBES IN A DARK AND REFRIGERATED PLACE NOT TO EXCEED 10 °C (50°F), AND USE BEFORE EXPIRATION DATE PRINTED ON TOP OF THE BOX.
6. PRIOR TO USE, READ CAREFULLY ITEM 9 "USER RESPONSIBILITY".

## 2. SAMPLING AND MEASUREMENT:

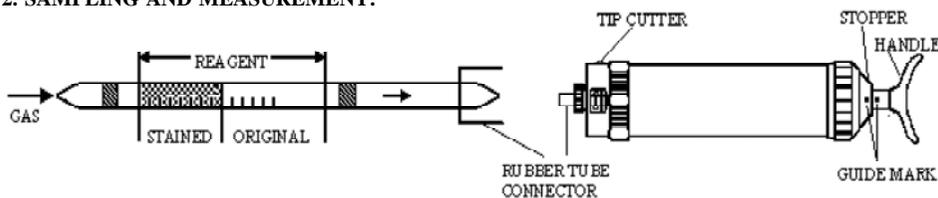


Fig.1

- ① Break both ends of detector tube.

**-CAUTION SAFETY GLASSES AND GLOVES SHOULD BE WORN TO PREVENT INJURY FROM SPLINTERING GLASS.**

- ② Insert the detector tube into aspirating pump securely as shown in Fig.1. (Arrow mark shall point to the pump.)
- ③ Align the guide marks on the shaft and stopper of the aspirating pump.
- ④ Pull the pump handle at full stroke until it locks and wait for 5 minutes or until the completion of sampling is confirmed with the flow indicator of the pump (See descriptions about the flow indicator in the instructions of the pump).  
**NOTE:** If using Model AP-400, pull pump handle to full stroke and turn the handle by 1/4 (90°), then wait for 5 minutes.
- ⑤ On completion of sampling, read the scale at the maximum point of the stained layer.
- ⑥ In case of 2 pump strokes, push the handle once more without removing the detector tube from the pump inlet, turn it right or left 1/4 and repeat step ④ once.
- ⑦ In this case, actual concentration is half of the reading value.

**SPECIAL NOTE:** I. The scale is calibrated at 20 °C (68°F) and 1013hPa. Readings obtained in other circumstances should be corrected (REF. ITEM 3).

II. When the maximum point of the stained layer is unclear, read the scale at the centre between the longest and shortest points.

## 3. CORRECTION FOR AMBIENT CONDITIONS:

- ① Temperature; Correct the tube reading by following temperature correction table.

Tube Readings (ppm)	Temperature Correction Table			
	Corrected Concentration (ppm)			
	0 °C (32°F)	10 °C (50°F)	20 °C (68°F)	40 °C (104°F)
50	38	45	50	
40	30	35	40	
30	22	26	30	
20	14	17	20	
10	7	8	10	
5	4	4	5	
2	2	2	2	
1	1	1	1	

- ② Humidity; No corrections are necessary.


- ③ Atmospheric Pressure;

$$\text{True concentration} = \frac{\text{Temperature corrected concentration} \times 1013}{\text{Atmospheric pressure (in hPa)}}$$

## 4. INTERFERENCES:

Phosphine produces greyish white/red stains and the coexistence of more than 20ppm with Silane will give higher readings. Arsenic produces dark brown/red stains and the coexistence of more than 50ppm will give higher readings. Disilane or Diborane produces a similar stain and each coexistence of 2ppm or 20ppm respectively with Silane will give higher readings. Sulphur dioxide change the whole reagent to Orange but the accuracy of readings is not affected by Sulphur dioxide if the top of the stained layer (red stain) by Silane is clear. Alcohols, Hydrogen, less than 250ppm of Hydrogen chloride or less than 200ppm of Dichlorosilane does not affect the accuracy of readings.

## 5. CHEMICAL REACTION IN THE DETECTOR TUBE:

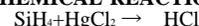

## 6. DISPOSAL OF TUBE:

**USED TUBES SHOULD BE DISCARDED CAREFULLY ACCORDING TO RELEVANT REGULATIONS, IF ANY.**

## 7. HAZARDOUS AND DANGEROUS PROPERTIES OF SILANE:

T.L.V. ◆ : 5 ppm

Explosive range in air : -

◆ Threshold Limit Value established by the American Conference of Governmental Industrial Hygienists, 2000.

## 8. INSPECTION OF ASPIRATING PUMP:

Checking for leaks;

- ① Insert sealed, unbroken detector tube into the pump.
- ② Align the guide marks on the shaft and stopper of the pump.
- ③ Pull the handle to full stroke and wait for 3 minutes. (If using Model AP-400, turn the handle by 1/4 (90°) to lock it.)
- ④ Unlock the handle and allow it to return slowly into the pump by holding the cylinder and handle securely.

**-CAUTION HANDLE WILL TEND TO SNAP BACK INTO THE PUMP QUICKLY.**

- ⑤ If the handle returns completely to the original position, the performance is satisfactory. Otherwise, refer to maintenance procedure in the pump instructions to correct the fault.

## 9. USER RESPONSIBILITY:

**It is the sole responsibility of the user of this equipment to ensure that the equipment is operated, maintained, and repaired in strict accordance with these instructions and the instructions provided with each Model AP-1, AP-1S, 400A or AP-400 aspirating pump, and that detector tubes are not used which are either beyond their expiration date or have a colour change different to that stated in the Performance specifications.**

**The Manufacturer and Manufacturer's Distributor shall not be otherwise liable for any incorrect measurement or any damages, whether damages result from negligence or otherwise.**