

- ★ READ CAREFULLY THIS INSTRUCTION MANUAL AND THE INSTRUCTIONS OF THE ASPIRATING PUMP PRIOR TO USING THIS PRODUCT.
- ★ DO NOT DISCARD THIS INSTRUCTION MANUAL UNTIL ALL OF THE TUBES IN THIS BOX ARE USED UP.

1. PERFORMANCE:

Measuring Range	:50-1,000ppm(*)	25-500ppm	100-2,000ppm
and Sampling Time	:1.5 minutes	3 minutes	1 minute
(*) Graduations on the detector tube are based on 1 pump stroke.			
Number of pump stroke	:1 pump stroke	2 pump strokes	1/2 strokes
Colour Change	: White → Black		
Detectable Limit	: 0.5ppm (1 pump stroke)		
Operating temperature	: 0-40 °C (32-104°F) (No temperature correction is necessary.)		
Aspirating Pump	: Model AP-20, AP-20S, 400B, AP-1, AP-1S, or 400A		

CAUTION

1. DETECTOR TUBE CONTAINS REAGENTS (SILVER NITRATE).
2. DO NOT TOUCH THE REAGENTS DIRECTLY ONCE TUBES ARE BROKEN.
3. KEEP THE TUBES OUT OF THE REACH OF CHILDREN.

NOTICE

1. USE ONLY WITH PUMP MODELS AP-20, AP-20S, 400B, AP-1, AP-1S OR 400A. OTHERWISE, CONSIDERABLE ERROR IN INDICATION MAY OCCUR.
2. BEFORE TESTING, CHECK THE ASPIRATING PUMP FOR LEAKS (REFER TO ITEM 8. INSPECTION OF ASPIRATING PUMP). ANY PUMPS SHOWING SIGNS OF LEAKAGE SHOULD BE CORRECTED BEFORE USE.
3. DO NOT USE THIS TUBE BEYOND THE STATED OPERATING TEMPERATURE RANGE.
4. STORE TUBES IN A COOL AND DARK PLACE (0-25 °C/32-77°F), AND USE BEFORE EXPIRATION DATE PRINTED ON TOP OF THE BOX.
5. PRIOR TO USE, READ CAREFULLY ITEM 9. USER RESPONSIBILITY.
6. READ THE CONCENTRATION IMMEDIATELY AFTER MEASUREMENT.

2. SAMPLING AND MEASUREMENT:

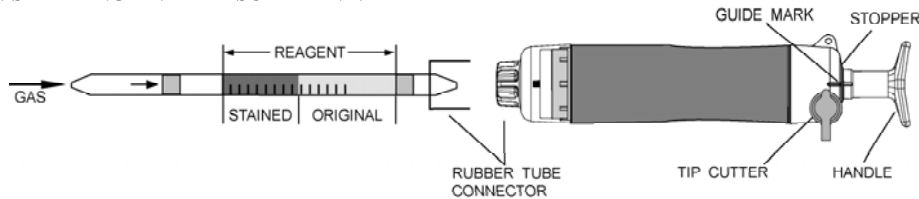


Fig.1

- ① Break both ends of detector tube.

CAUTION SAFETY GLASSES AND GLOVES SHOULD BE WORN TO PREVENT INJURY FROM SPLINTERING GLASS.

- ② Insert the detector tube into aspirating pump securely as shown in Fig.1 (Arrow mark shall point to the pump.)
- ③ Align the guide marks on the shaft and stopper of the aspirating pump.
- ④ Pull the pump handle at full stroke until it locks and wait for 1.5 minutes or until the completion is confirmed with the flow indicator of the pump (See descriptions about the flow indicator in the instructions of the pump).
- ⑤ On completion of sampling, read the scale at the top of the stained layer.
- ⑥ In case of 2 pump strokes, push the handle once more without removing the detector tube from the pump inlet, turn it right or left 1/4 and repeat step ④ once.
- ⑦ In this case, actual concentration is half of the reading value.

- ⑧ If the discolouration is over the scale, change the tube and pull 1/2 strokes.
 - 1) Insert the new tube to the pump inlet. Pull the handle at 1/2 strokes (to 50mL line), and it will be automatically locked. Leave it for 1 minute as it is.
 - 2) Remove the detector tube from the pump and read the concentration.
 - 3) Then multiply the reading value by 2.

SPECIAL NOT I. The scale is calibrated at 20 °C (68°F), 50 %R.H. and 1013hPa. Readings obtained in other circumstances should be corrected (REFER TO ITEM 3. CORRECTION FOR AMBIENT CONDITIONS).
II. When the maximum point of the stained layer is unclear or obliquely, read the scale at the centre between the longest and shortest points.

3. CORRECTION FOR AMBIENT CONDITIONS:

- ① Temperature; No corrections is necessary.
- ② Humidity; No corrections is necessary.
- ③ Atmospheric Pressure ;

$$\text{True concentration} = \text{Tube reading} \times \frac{1013}{\text{Atmospheric pressure (in hPa)}}$$

4. INTERFERENCES:

Substance	Interference	Coexistence
Sulphur dioxide	The accuracy of readings is not affected.	In case of 5,000ppm or more, will give lower readings.
Mercaptans	Pale yellow stains is produced.	In case of 50ppm or more, the top of discoloured layer becomes unclear, stained layer becomes light and higher readings are given.

5. CHEMICAL REACTION IN THE DETECTOR TUBE:



6. DISPOSAL OF TUBE:

USED TUBES SHOULD BE DISPOSED CAREFULLY ACCORDING TO RELEVANT REGULATIONS, IF ANY.

7. HAZARDOUS AND DANGEROUS PROPERTIES OF HYDROGEN SULPHIDE:

TLV-TWA ◆ 5 ppm (NOTICE OF INTENDED CHANGES)

Explosive range in air 4.0 - 45.5 %

◆ Threshold Limit Value established by the American Conference of Governmental Industrial Hygienists, 2004.

8. INSPECTION OF ASPIRATING PUMP:

Checking for leaks;

- ① Insert sealed, unbroken detector tube into the pump.
- ② Align the guide marks on the shaft and stopper of the pump.
- ③ Pull the handle at full stroke and wait for 1 minute.
- ④ Unlock the handle and allow it to return slowly into the pump with holding the cylinder and handle securely.

CAUTION HANDLE WILL TEND TO SNAP BACK INTO THE PUMP QUICKLY.

- ⑤ If the handle returns completely to the original position, the performance is satisfactory. Otherwise, refer to maintenance procedure in the pump instructions to correct the fault.

9. USER RESPONSIBILITY:

It is the sole responsibility of the user of this equipment to ensure that the equipment is operated, maintained, and repaired in strict accordance with these instructions and the instructions provided with each Model AP-20, AP-20S, 400B, AP-1, AP-1S or 400A aspirating pump, and that detector tubes are not used which are either beyond their expiration date or have a colour change different to that stated in the Performance specifications.

The Manufacturer and Manufacturer's Distributors shall not be otherwise liable for any incorrect measurement or any damages, whether damages result from negligence or otherwise.