

INSTRUCTION MANUAL

No.120UT

Kitagawa HYDROGEN SULPHIDE DETECTOR TUBES

- ★ READ CAREFULLY THIS INSTRUCTION MANUAL AND THE INSTRUCTIONS OF THE ASPIRATING PUMP PRIOR TO USING THIS PRODUCT.
- ★ DO NOT DISCARD THIS INSTRUCTION MANUAL UNTIL ALL OF THE TUBES IN THIS BOX ARE USED UP.

1. PERFORMANCE:

Measuring Range	5 - 40 %	2.5 - 5 %
and Sampling Time:	(1/2 pump strokes) (1 minute)	(1 pump stroke) (1.5 minutes)

Graduations on the detector tube are based on 1/2 pump strokes.

Colour Change:	Pale blue - Black	
Operating temperature:	0-40 °C (32-104°F) (No temperature correction is necessary.)	
Aspirating Pump:	Model AP-1, AP-1S, 400A or AP-400	

•CAUTION

1. DETECTOR TUBE CONTAINS REAGENTS.
2. DO NOT TOUCH THE REAGENTS DIRECTLY ONCE TUBES ARE BROKEN.
3. KEEP THE TUBES OUT OF THE REACH OF CHILDREN.

NOTICE

1. USE ONLY WITH PUMP MODELS AP-1, AP-1S, 400A OR AP-400. OTHERWISE, CONSIDERABLE ERROR IN INDICATION MAY OCCUR.
2. DON'T USE FLOW CONTROL ORIFICE WITH THIS TUBE. (FOR MORE DETAIL, REFER TO THE INSTRUCTIONS OF THE ASPIRATING PUMP.)
3. BEFORE TESTING, CHECK THE ASPIRATING PUMP FOR LEAKS (REF. ITEM 8). ANY PUMPS SHOWING SIGNS OF LEAKAGE SHOULD BE CORRECTED BEFORE USE.
4. DON'T USE THIS TUBE OUTSIDE THE STATED OPERATING TEMPERATURE RANGE.
5. STORE TUBES IN A COOL AND DARK PLACE (0-25 °C/32-77°F), AND USE BEFORE EXPIRATION DATE PRINTED ON TOP OF THE BOX.
6. PRIOR TO USE, READ CAREFULLY ITEM 9 "USER RESPONSIBILITY".

2. SAMPLING AND MEASUREMENT:

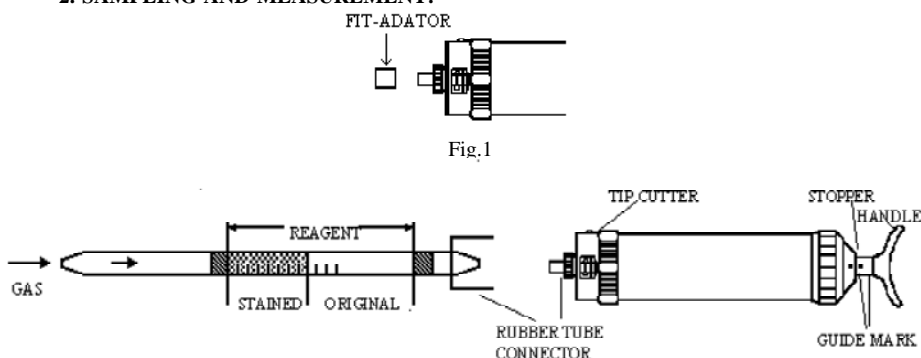


Fig.2

- ① Connect the fit-adaptor to the rubber tube connector of the aspirating pump as shown in Fig.1.
- ② Break both ends of detector tube.

•CAUTION SAFETY GLASSES AND GLOVES SHOULD BE WORN TO PREVENT INJURY FROM SPLINTERING GLASS.

- ③ Insert the detector tube into aspirating pump securely as shown in Fig.2 (Arrow mark shall point to the pump.)
- ④ Align the guide marks on the shaft and stopper of the aspirating pump.
- ⑤ Pull pump the handle at 1/2 strokes until it locks and wait for 1 minute or until the completion is

confirmed with the flow indicator of the pump (See descriptions about the flow indicator in the instructions of the pump).

NOTE: If using Model AP-400, pull the pump handle at full stroke and turn the handle by 1/4 (90°) then wait for 1 minute.

- ⑥ Remove the detector tube from the connector on the completion of the sampling. A reading can be obtained directly from the scale printed on the detector tube.
- ⑦ In case that concentration is less than 5% turn the handle right or left after above step 4 and push it back fully without removing the detector tube from the connector. Then repeat above step 4 and 5 once. And divide the reading value by 2.

SPECIAL NOTE: I. The scale is calibrated at 20 °C (68°F) and 1013hPa. Readings obtained in other circumstances should be corrected (refer to following CLAUSE 3).
II. When the maximum point of the stained layer is unclear or obliquely, read the scale at the centre between the longest and shortest points.

3. CORRECTION FOR AMBIENT CONDITIONS:

- ① Temperature; No corrections are necessary.
- ② Humidity; No corrections are necessary.
- ③ Atmospheric Pressure ;

$$\text{True concentration} = \text{Tube reading} \times \frac{1013}{\text{Atmospheric pressure (in hPa)}}$$

4. INTERFERENCES:

Sulphur dioxide does not change the reagent by itself but the coexistence of more than 8% with Hydrogen sulphide will give lower readings. Carbon dioxide does not affect any reading values.

5. CHEMICAL REACTION IN THE DETECTOR TUBE:



6. DISPOSAL OF TUBE:

USED TUBES SHOULD BE DISCARDED CAREFULLY ACCORDING TO RELEVANT REGULATIONS, IF ANY.

7. HAZARDOUS AND DANGEROUS PROPERTIES OF HYDROGEN SULPHIDE:

T.L.V.◆ : 10 ppm (NOTICE OF INTENDED CHANGES)

Explosive range in air : 4.3 - 45.5 %

◆ Threshold Limit Value established by the American Conference of Governmental Industrial Hygienists, 2000.

8. INSPECTION OF ASPIRATING PUMP:

Checking for leaks;

- ① Insert sealed, unbroken detector tube into the pump.
- ② Align the guide marks on the shaft and stopper of the pump.
- ③ Pull the handle at full stroke and wait for 3 minutes. (If using Model AP-400, turn the handle by 1/4 (90°) to lock it.)
- ④ Unlock the handle and allow it to return slowly into the pump by holding the cylinder and handle securely.

•CAUTION HANDLE WILL TEND TO SNAP BACK INTO THE PUMP QUICKLY.

- ⑤ If the handle returns completely to the original position, the performance is satisfactory. Otherwise, refer to maintenance procedure in the pump instructions to correct the fault.

9. USER RESPONSIBILITY:

It is the sole responsibility of the user of this equipment to ensure that the equipment is operated, maintained, and repaired in strict accordance with these instructions and the instructions provided with each Model AP-1, AP-1S, 400A or AP-400 aspirating pump, and that detector tubes are not used which are either beyond their expiration date or have a colour change different to that stated in the Performance specifications.

The Manufacturer and Manufacturer's Distributor shall not be otherwise liable for any incorrect measurement or any damages, whether damages result from negligence or otherwise.